

Alternator Terminal Identification Chart

System	Field	Battery Positive	Battery Sense	Ground Earth	Neutral	Indicator Light	Ignition	Phase or Stator Tap	Dummy	CPU Control	Dynamo Field Monitor
Bosch	DF	B+	BS	B-/D-		D+		W			DFM
CAV	DF	B+		D-		D+		W			
Delco Remy	F	B+	M/S	NEG		IND	IGN	R			
Ford	DF/F	B+		D-/VE		L		S			
Hitachi	F	B/A	S	E	N	L	IG/R	P	D	FR	
Iskra	DF	B+		B-/D-		D+		W			
Leece Neville	F	B+		B-		TRIO	IGN	R			
Lucas	DF	B+		B-		D+	IGN	W			
Magneti Marelli	DF/67	B+/30		31/B-	C	15		W			
Mitsubishi	F	B/A	S	E	N	L	IG/R	P	D	FR	
Motorola	EXC	B+		B-		IND		R			
Nikko	FLD	B+/S		B-		L					
Nippondenso	F	B+	S	E	N	L	IG	STATOR			
Prestolite	F	B+		B-		IND		R			
Valeo	DF	B+		B-		D+		E			

